

TRANS-TIBIAL

Section 1:3 Laminated Sockets

Section 1:3:1 Laminated Socket

Section 1:3:2 Laminated Socket - Pyramid Alignment

Section 1:3:3 Laminated Socket - Socket Lock

Tools, Equipment and Materials

Number Description

905100	DegaPlast Resin 80 - 20
905106	DegaPlast Hardener
905115	DegaPlast Pigment - Light Caucasian
905116	DegaPlast Pigment - White
905117	DegaPlast Pigment - Brown
909209	Nylon Stocking - White
909103	Nylon Stockinette, 100mm wide
909202	Glass Stockinette, 100mm wide
909201	Glass Needle Mat
909223	Carbon Fibre Tape, 38mm wide
909222	Carbon Fibre Tape, 75mm wide
928404	Anti Stick, Dry Film Release Agent
928001	Petroleum jelly
	Nyglass
	Woven Glass Stockinette
	Carbon Fibre Cloth

Code of Lamination Materials



Perlon or
Stockinette



Glass
Stockinette
or Woven Glass
Stockinette



Nylon
Stocking



Terylene Felt



Carbon Fibre
Tape



Nyglass



Carbon Fibre
Cloth


Tools:

Number Description

940661	Socket formers for laminated sockets (all formers)
941158	Vacuum post for laminating
940514	Drill, 6mm dia.

User Guide for Laminated Socket Former Kit 940661

3	External Formers	6	Internal Formers
3	M16 Domed Nuts	4	Spigots
3	Collars		





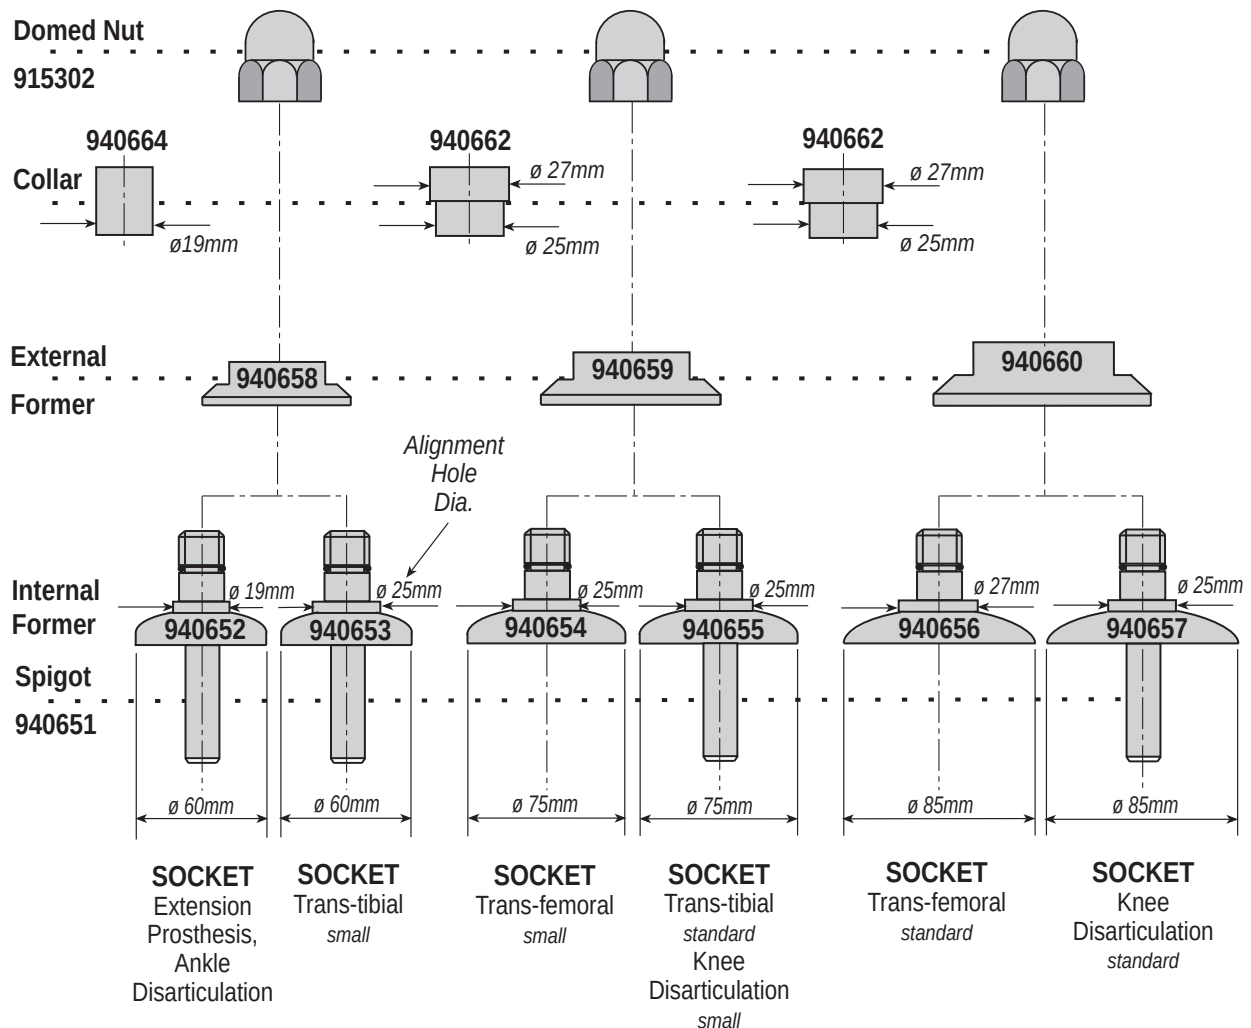


PROTECTIVE GLOVES SHOULD BE WORN WHEN USING OVEN AND HANDLING HOT MATERIALS
WARNING




When handling hazardous chemicals and materials all work is to be carried out in Extracted Booths.
The relevant Health and Safety, Manufactures Handling and Storage Information should be consulted.

Laminated Socket Section 1:3:1

Manufacture a Socket Liner following: Section 1:1:2

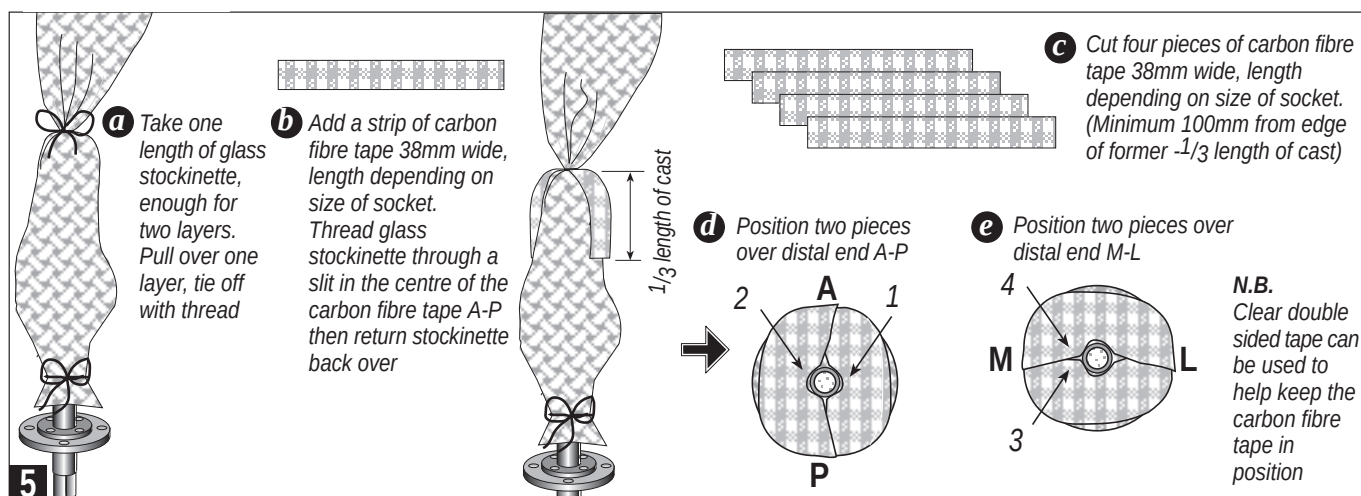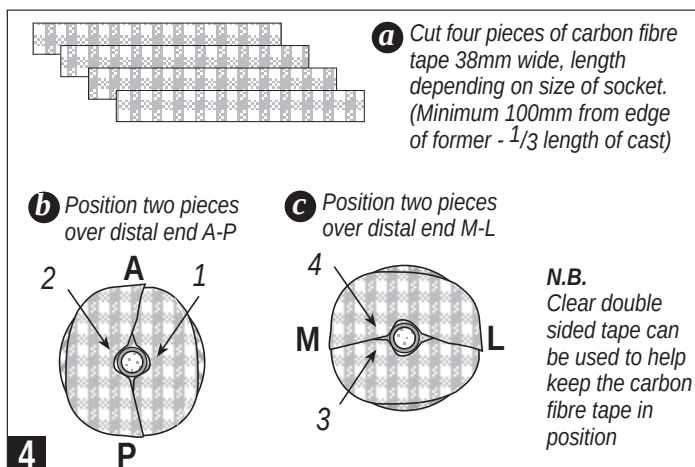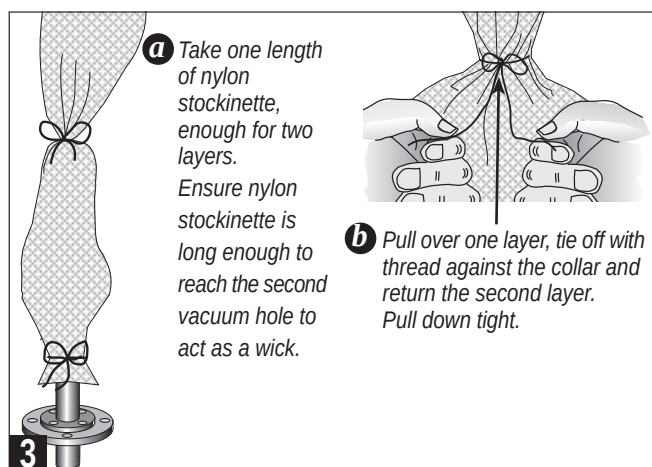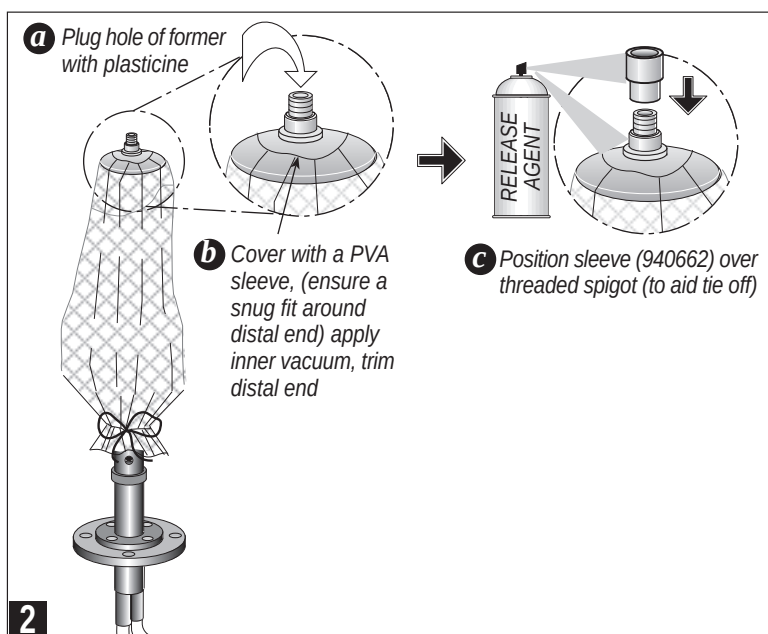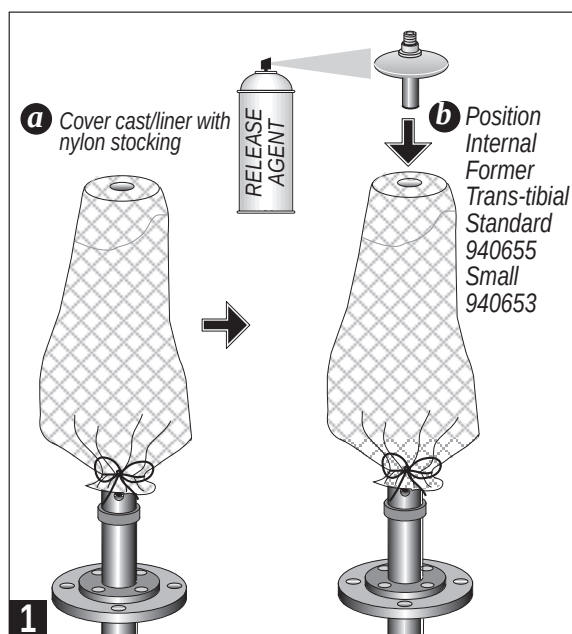




Section 1:3:1 Laminated Socket

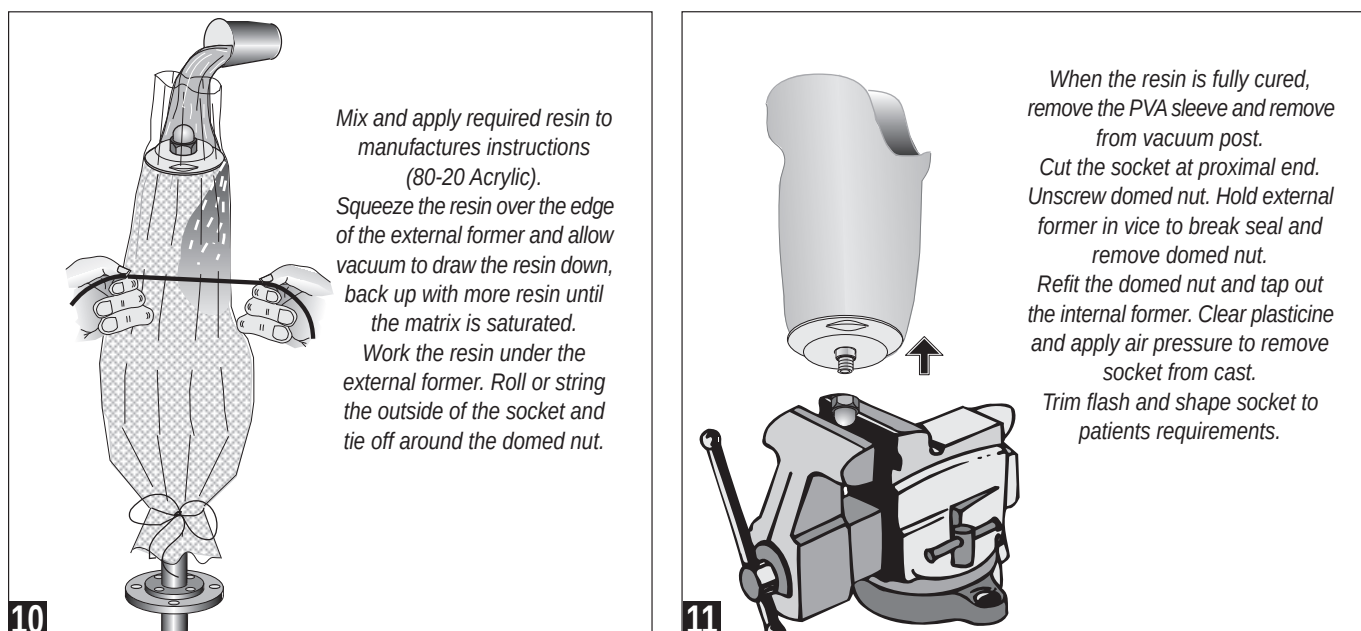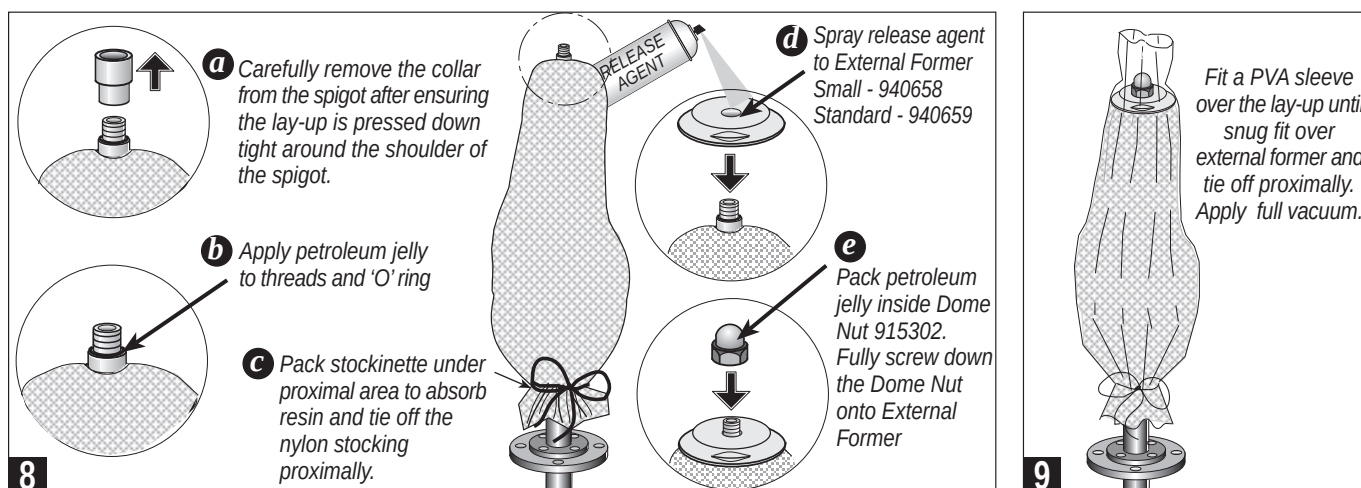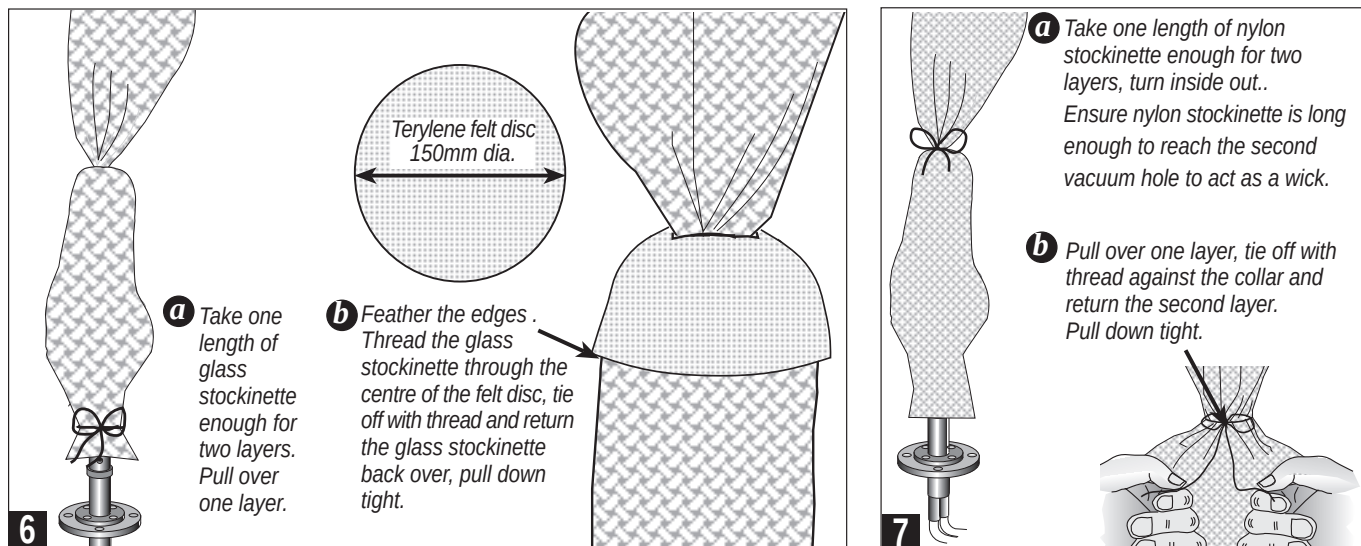





Laminated Socket using **PROLITE** Pyramid Adaptor Section 1:3:2

Manufacture a Socket Liner following: Section 1:1:2






*** This procedure can be done as a single lay-up if no abnormal alignment is required**

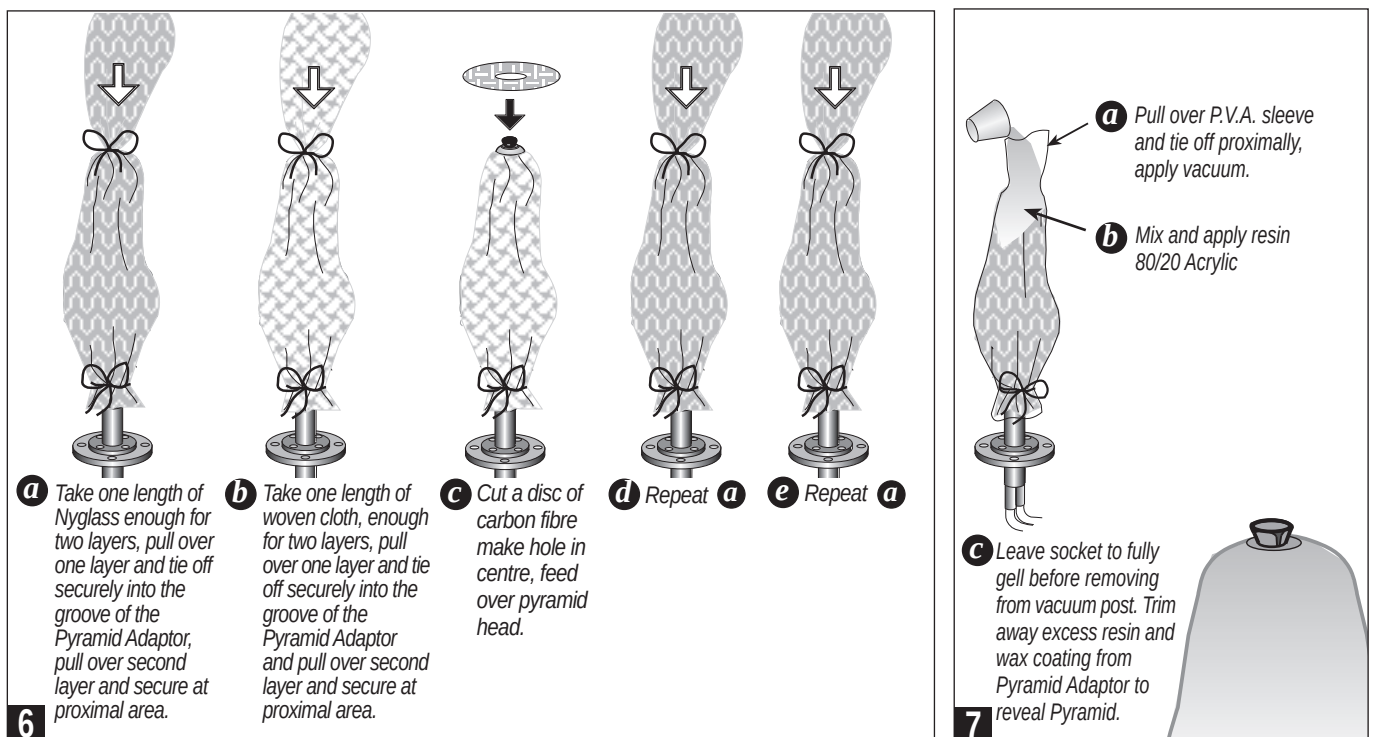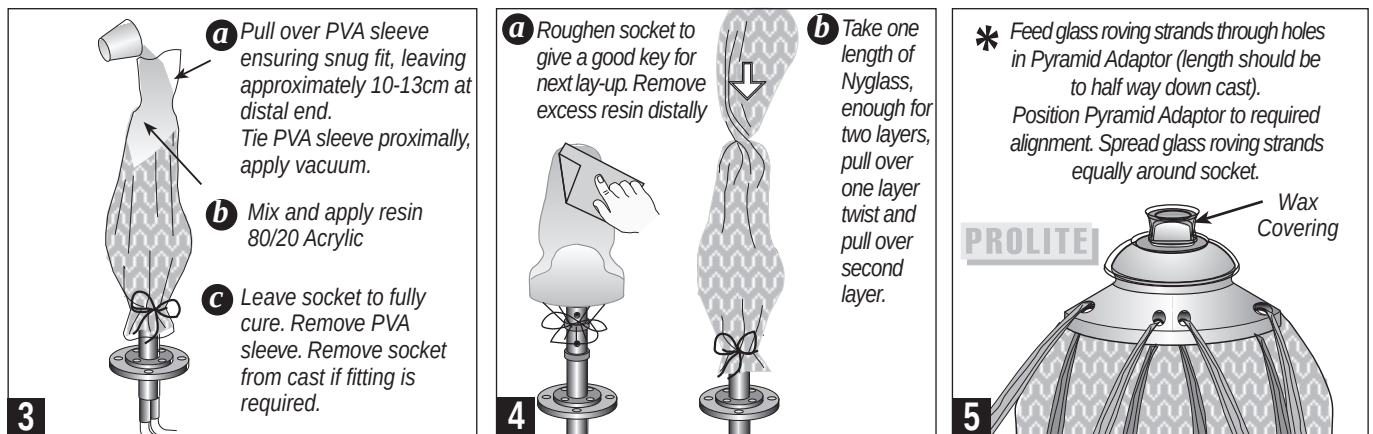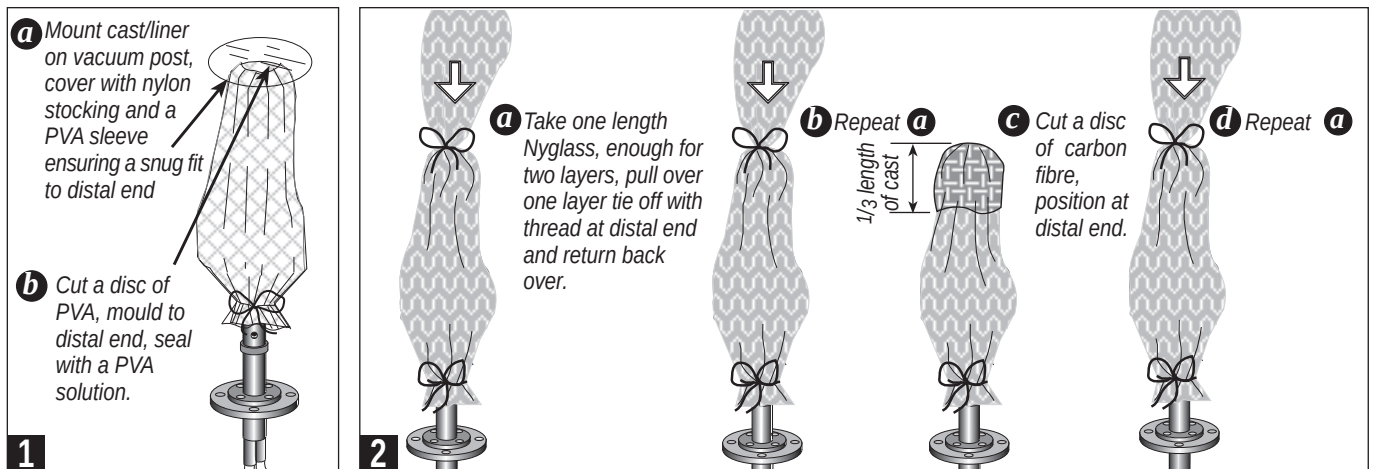

Section 1:3:3 Laminated Socket - Socket Lock

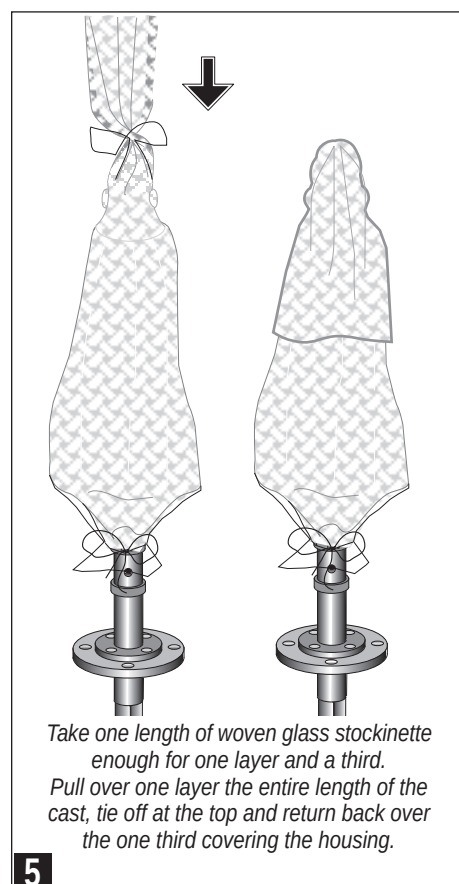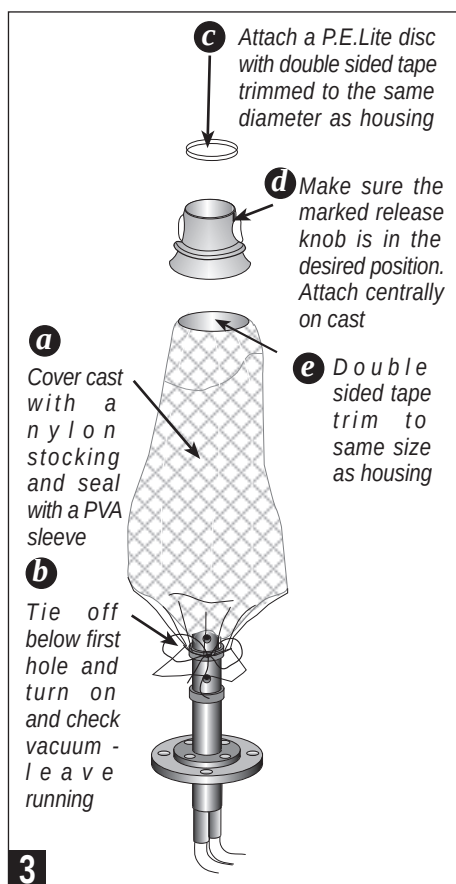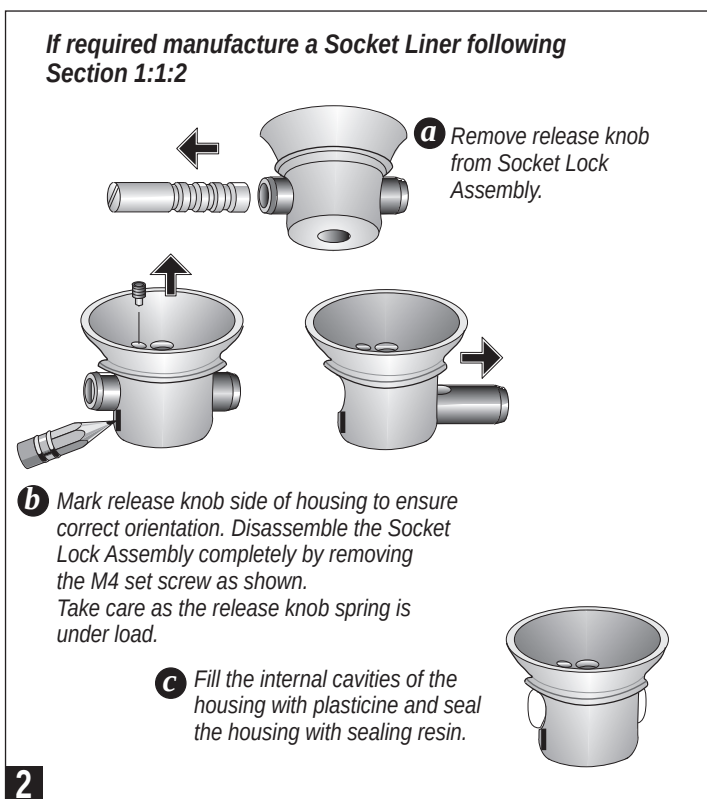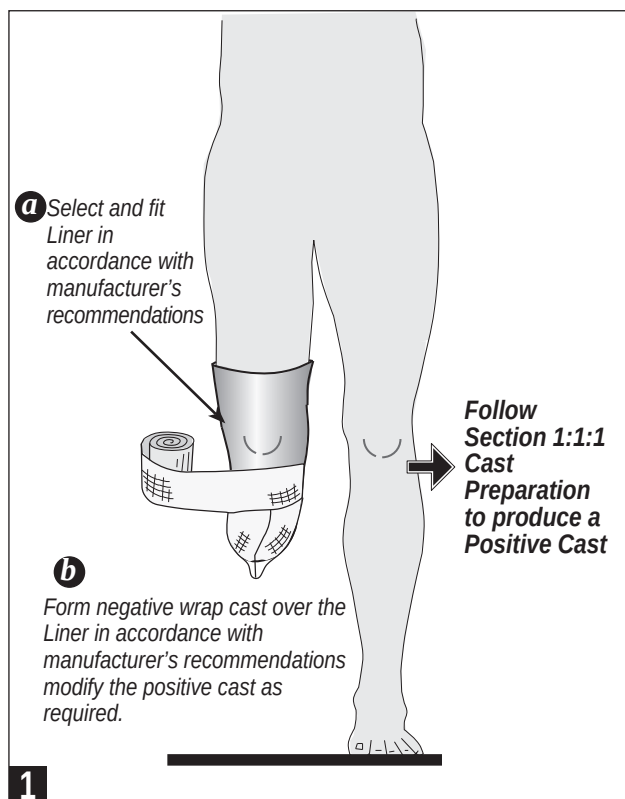

Laminated Socket - Socket Lock Section 1:3:3

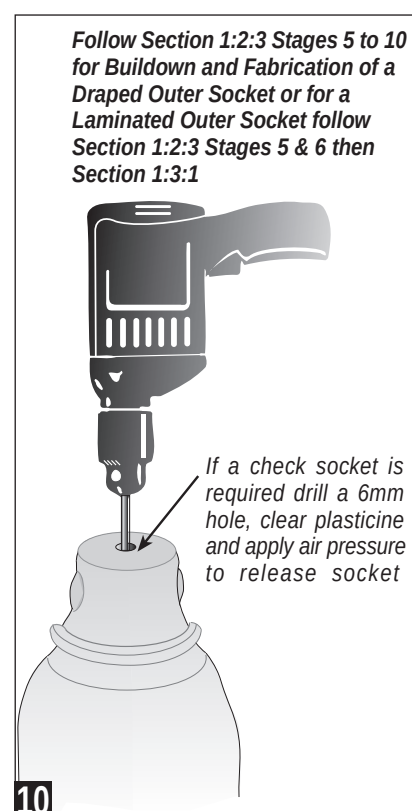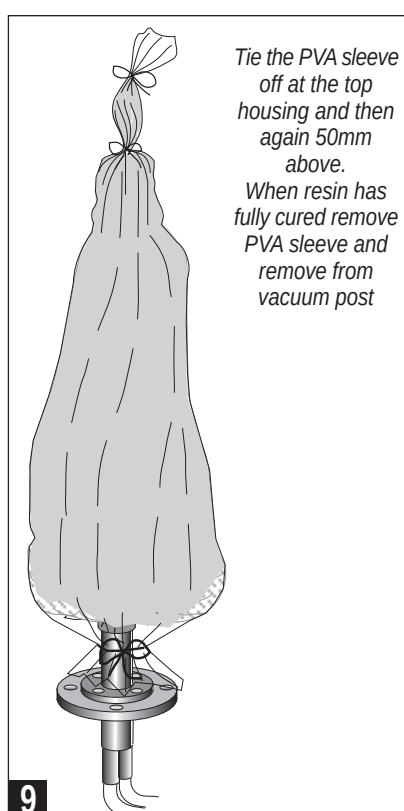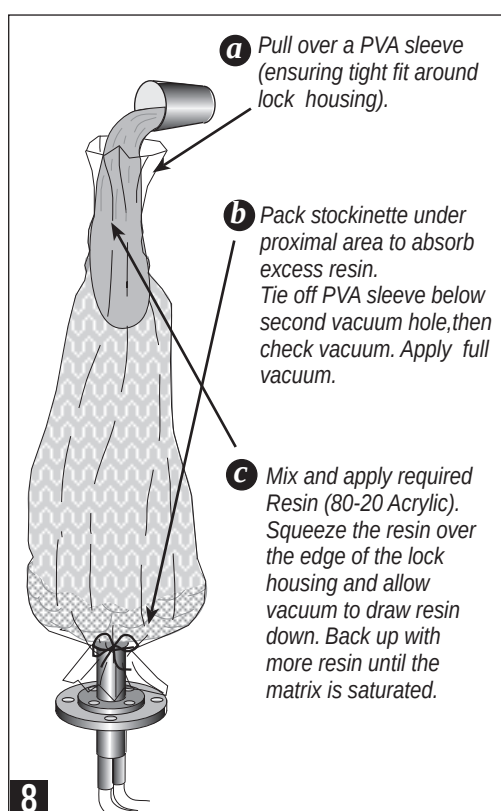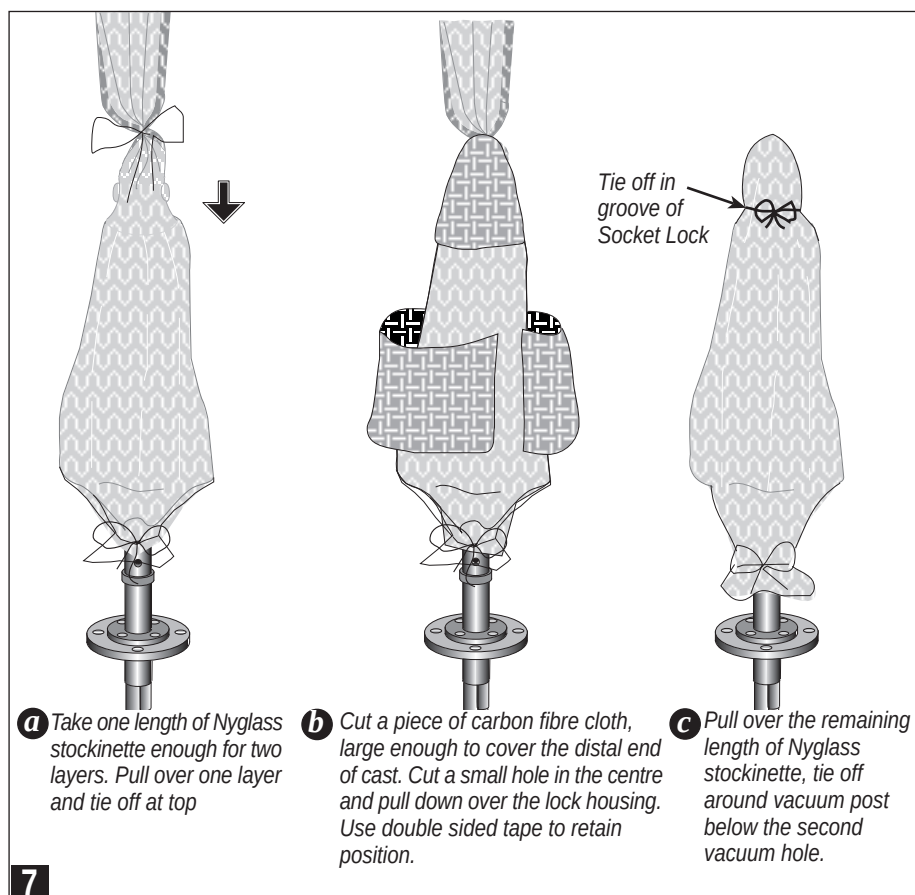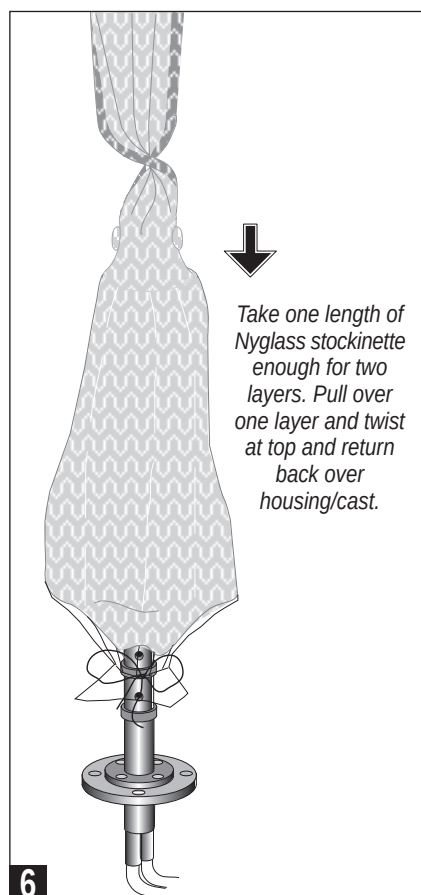

Section 1:3:3 Laminated Socket - Socket Lock 109108

